

# TI500-2S INSTALLATION PROCEDURES

## PRECAUTIONS

1. Before Switch ON the PBX check for proper earth in the site ( recommended Earth to Neutral voltage should be below 5V, recommended Phase to Neutral voltage should be 180V to 240V )
2. During Power ON PBX takes 40 to 50 seconds for booting which is indicated by fast blinking of CPU led (0.1s ON & 0.1s OFF) during that time all extensions will be in blow condition. After booting PBX will be ready for use which is indicated by normal blinking of CPU led (0.5s ON & 0.5s OFF).

## PROGRAMMING THE SYSTEM

1. Extension Number and Feature Number default
  - Dial **Flash + 97630** to make extension number default 100 - 131 for TI500-2S.
  - Dial **Flash + 97631** for feature number default (wait until dial tone).
2. Entering Program mode **Flash + 99 + Programming Password** (default 1234)
  - Dial **9555** for PBX default (wait until music).
  - Dial **90** for exit program mode.
3. After doing this program power off & on the PBX

## USER'S GLANCE FOR TI500-2S


Default Extension Number	100 - 131
Voice for port number play	756 + 01
Voice for extension number play	756 + 02
To hear last five received call	756 + 03
To hear last five missed call	756 + 04
To hear last five dialed call	756 + 05
Call Forward-any time	717 + Ext. Number
Call Forward-when Busy	718 + Ext. Number
Call Follow Me	719 + Ext. Number
Do Not Disturb	716 + Ext. Number
Call Privacy	715 + Ext. Number + 0/1
Feature Cancellation	7900
Call park	FLASH + * + 7
Parked Call Pickup by Own	78
Parked Call Pickup by Other	78 + Ext. Number
Five Party Conference	769
Call Transfer	FLASH + Ext. Number
Call split	* or 0 (On holding two party)
Call consult(Broker call)	FLASH 6 in two parties hold
Pickup - any call	*
Particular Ext call pickup	758 + Ext. Number
Three Party Conference	Dial 7 in two parties hold
Barge-in	766 + Ext. Number
Silent Barge-in	768 + Ext. Number
Emergency Reporting	70
Extension HotLine	751 + 0/1 + Ext. Number
Exit hotline	Flash for Extension
Hotline Cancellation	7910
Paging	767
Alarm Setting	754 + HHMM
Alarm setting from remote	754* + Ext. number + HHMM
Alarm cancellation	7920
Daily Alarm	754 + # + HHMM

Daily Alarm Cancel	7921
Flat door lock enable / disable	763 + 0 + 0/1
Flat door cancel by operator	763 + * + Ext Num
Reverse call	711
Last attended call	712
To assign Meet me on conference	713 + start time + end time + 4 Extno
Cancellation	713 + #
Meet me on conference	714
Extension Group Call	759 + group number
Extension Group Pickup	710
Auto Call Back	72 on dial tone
Multiple Paging access	661 + (1-8)

## PROGRAMMER'S GLANCE FOR TI500-2S

Enter into the Programming Mode	Flash + 99 + Password (default -1234)
Exit From The Programming Mode	90
Changing programming mode password	98 + old password + new password
Default Programming	9555
CLI with prefix	80 + * + *
CLI without prefix	80 + * + 1
CLI disable	80 + * + 0
Transfer CLI enable	80 + * + 2
Transfer CLI disable	80 + * + 3
Transfer Digit Programming	84 + Ext Number +0/1
To Set Extension caller Id	80 + Ext Number + option (0/1)
Port vs Extension number programming	15 + port no + Extension number + Flash
Feature Code programming	15 + port no + * + Feature Code + Flash
Delete Particular Port Number	15 + port no + Flash
Feature Code Deletion	15 + port no + * + Flash
Extension number assigning for multiple port	15 + * + starting port number + ending port number + starting extension number+ flash
Flexible number Deletion – Number of digits	12 + 1-9 + #
Set Time	61 + HHMM
Set Date	62 + DDMMYYD
Set Page port	75 + Extension Number

Cancel Page port	75 + *
Emergency Extension programming	13 + 4 extensions sequence
Feature access level	42 +Ext. No.+ (1-5)
Class of Service (Extension)	31 + Ext. No. + 0/1
Missed Call enable	35 + Ext. No + (0-disable/1-enable)
Room to room calling selection	32 + Ext. No.+ Abbcos + (0-disable/1-
Executive Extension	81 + Extension Number
Extension group	94 + Group no.(1 to 6) + 8 extensions + Number of seq extn(1 to 8)
Multiple Paging Enable	74 + 1-8 + Ext. No
Multiple Paging Disable	74 + * + 1-8
Flash time programming	66 + starting port + ending port + flash time(4-9)
Flash time	66 + 4/5/6/7/8/9

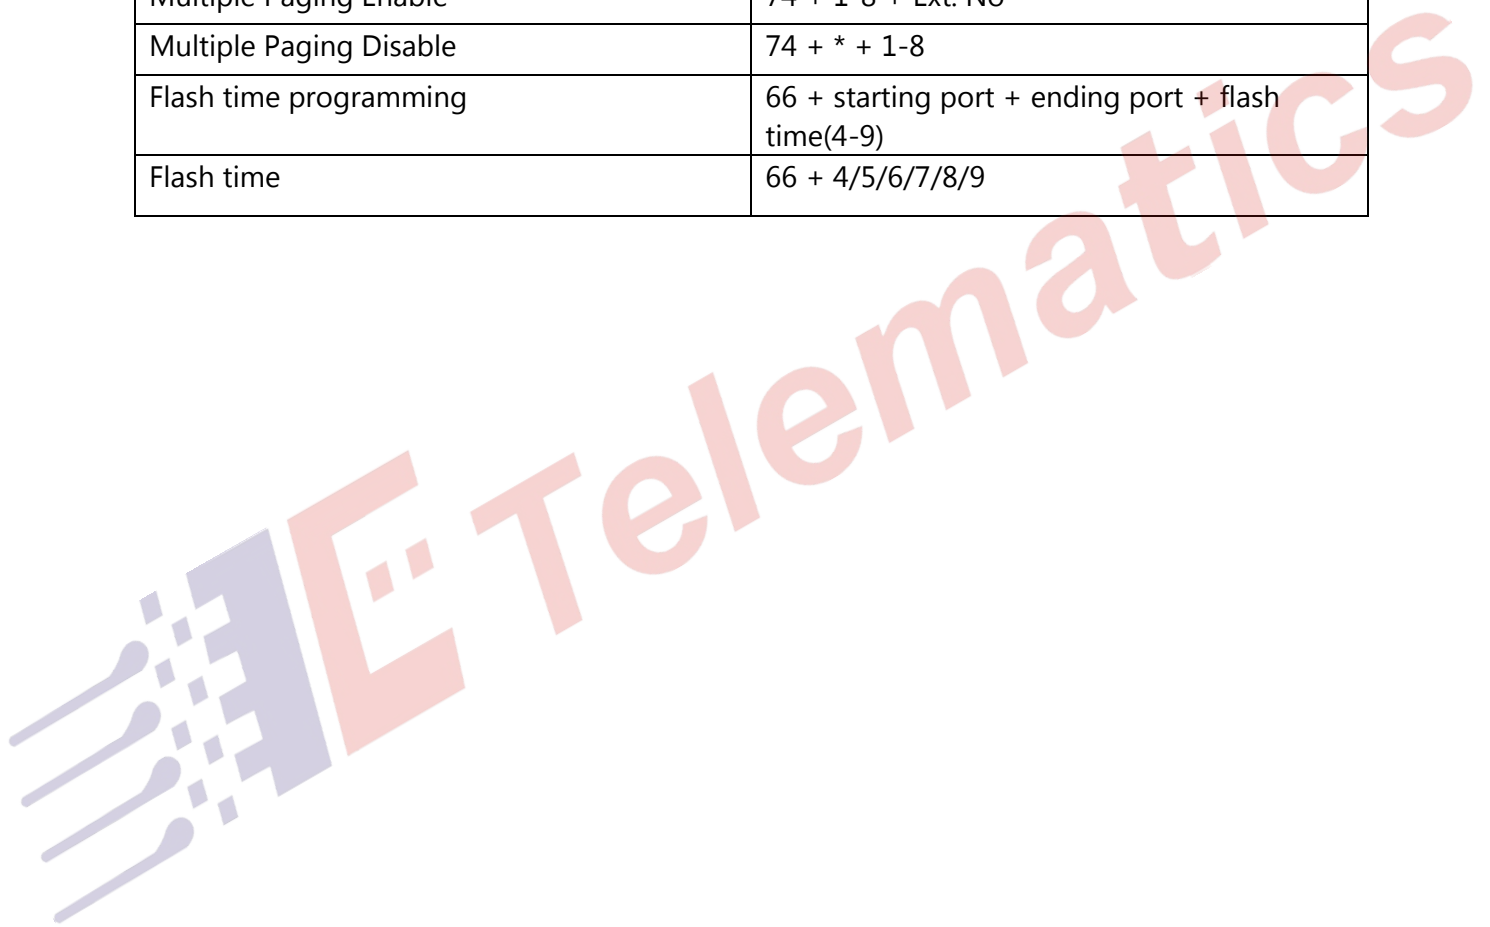

## DEFAULT FEATURE CODES AT A GLANCE

NO	CODE	FEATURE NAME
001	756	Voice play
002	*	General pickup
003	70	Emergency reporting
004	72	Auto callback
005	74	Trunk pickup
006	73	Extension pickup
007	766	Barge-in
009	78	Park pickup
010	79	Feature cancellation
011	763	Flat door lock
020	759	Extension group
023	711	Missed call
024	712	Last attended call
025	713	MTM cnf store
026	714	MTM cnf entry
027	716	DND
028	717	Call forward any
029	718	Call forward when busy
030	719	Call follow me
031	751	Extension Hotline
034	754	Alarm set
035	757	Dynamic entry
036	767	Paging
038	758	Extension pickup
039	768	Intrude
041	769	Conference
043	710	Group pickup
044	715	Call privacy
047	9	KTS call
048	7#	KTS pickup
049	66	Multiple paging

DEFAULT EXTENSION NUMBER

PORT NO.	EXT. NO	PORT NO.	EXT. NO	PORT NO.	EXT. NO
001	100	002	101	003	102
004	103	005	104	006	105
007	106	008	107	009	108
.	.	.	.	.	.
.	.	.	.	.	.
027	126	028	127	029	128
030	129	031	130	032	131

